# Installing Guide

**Zeliox Compact** 



ZEIOX ® EXCESSIVEPOWER

## Contents

1.	Stand Alone	3
2.	Aluca	2
3.	Bott	8
4.	Servicesystem	11
5.	Sortimo	14
6	Different brands	17


## 1. Stand Alone

## Follow these steps for correct installation




#### **WARNING:**

• Do not place the Zeliox Compact upside down or on its back.

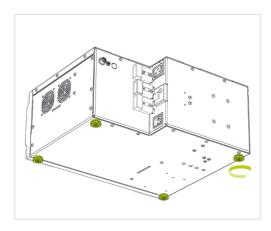

- 1. Screw the 4 legs in place at marked positions.
- 2. See User & Installation Manual page 25 for further instructions.

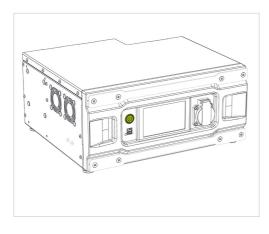

3. Zeliox Compact is ready for use.




## 2. Aluca

## Follow these steps for correct installation




#### **WARNING:**


• Do not place the Zeliox Compact upside down or on its back.

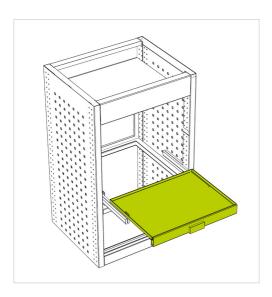


- All cables should be prepared and routed according the local regulations.
- 2. Remove the drawer from the cabinet.

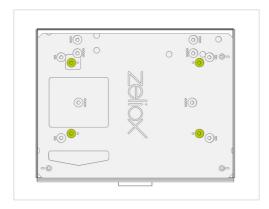


3. Place the adapter plate ZEL-MKS-024 inside the drawer and mark the hole positions.

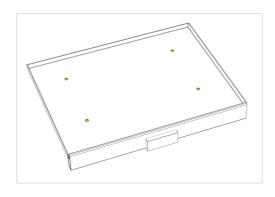

4. Drill 4 holes size 7mm at the marked positions.

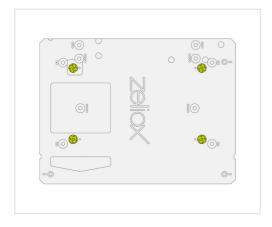


5. Place 4 claw nuts M6 at the marked positions.

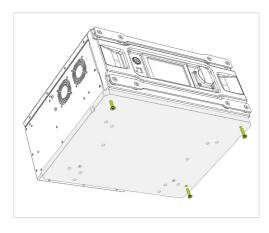


6. Mount the adapter plate ZEL-MKS-024 at the bottom of the Zeliox Compact with 3 bolts.




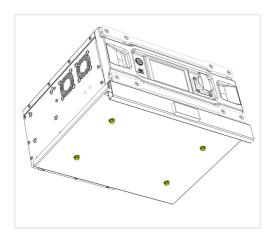

- 7. Place the Zeliox Compact with adapter into the drawer.
- 8. Mount the 4 bolts at the marked positions.

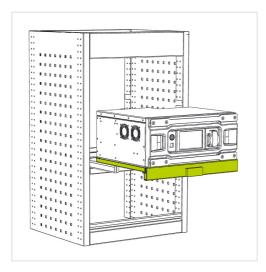

- Place the drawer into the rails connecting the assembly to the cabinet.
- 10. See User & Installation Manual page 25 for further instructions.
- 11. Connect the cables to the Zeliox Compact.

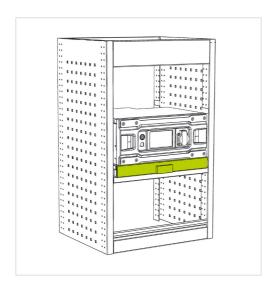

- 12. Gently close the drawer until it clicks in place.
- 13. The Zeliox Compact is ready for use.


## 3. Bott

## Follow these steps for correct installation




#### **WARNING:**


• Do not place the Zeliox Compact upside down or on its back.

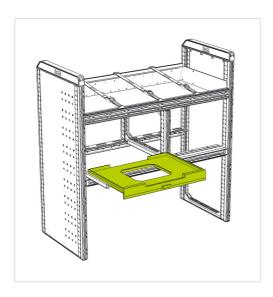

- All cables should be prepared and routed according the local regulations.
- 2. Remove the drawer from the cabinet.

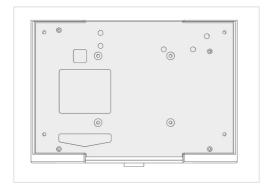


 Place adapter ZEL-MKS-020 inside drawer and check the spacing around the plate, this should be equal.

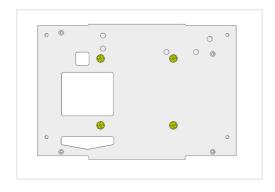

4. Place 4 claw nuts M6 at the marked positions.




5. Mount the adapter plate ZEL-MKS-020 at the bottom of the Zeliox Compact.

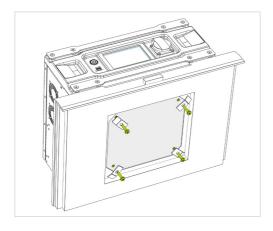


6. Mount the 4 bolts at the marked positions.



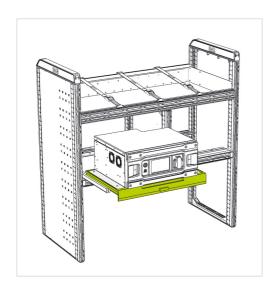

- 7. Place the drawer into the rails connecting the assembly to the cabinet.
- 8. See User & Installation Manual page 25 for further instructions.
- 9. Connect the cables to the Zeliox Compact.

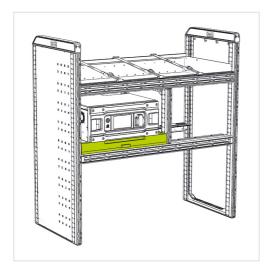

- 10. Gently close the drawer until it clicks in place.
- 11. The Zeliox Compact is ready for use.


## 4. Servicesystem

## Follow these steps for correct installation




### **WARNING:**

• Do not place the Zeliox Compact upside down or on its back.

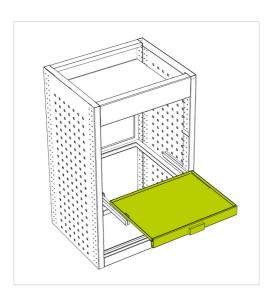


- All cables should be prepared and routed according the local regulations.
- 2. Remove the drawer from the cabinet.

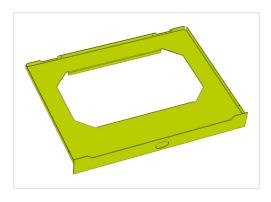


3. Place adapter ZEL-MKS-020 inside drawer and check the spacing around the plate, this should be equal.




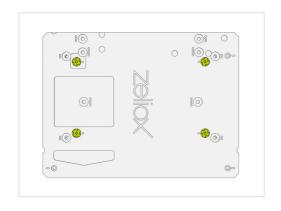


4. Place 4 claw nuts M6 at the marked positions.

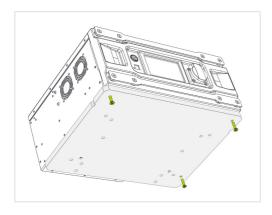


5. Mount the adapter plate ZEL-MKS-024 at the bottom of the Zeliox Compact with 3 bolts.

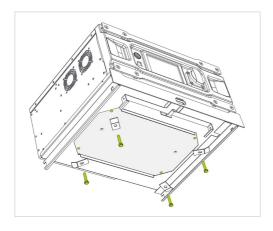

6. Mount the 4 bolts at the marked positions.

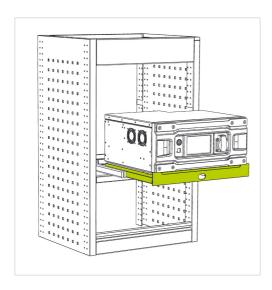

- 7. Place the drawer into the rails connecting the assembly to the cabinet.
- 8. See User & Installation Manual page 25 for further instructions.
- 9. Connect the cables to the Zeliox Compact.

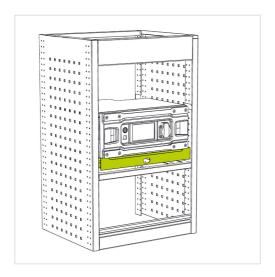

- 10. Gently close the drawer until it clicks in place.
- 11. The Zeliox Compact is ready for use.




## 5. Sortimo

## Follow these steps for correct installation




#### **WARNING:**


• Do not place the Zeliox Compact upside down or on its back.

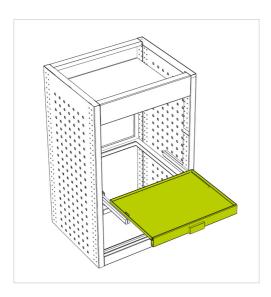


- All cables should be prepared and routed according the local regulations.
- 2. Remove the drawer from the cabinet.

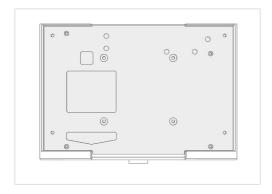


3. Place adapter ZEL-MKS-020 inside drawer and check the spacing around the plate, this should be equal.

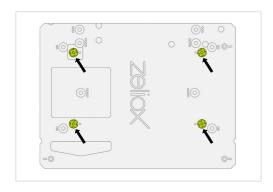

4. Place 4 claw nuts M6 at the marked positions.

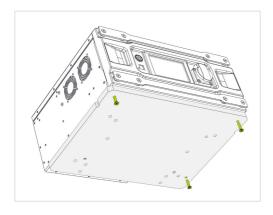


5. Mount the adapter plate ZEL-MKS-024 at the bottom of the Zeliox Compact with 3 bolts.

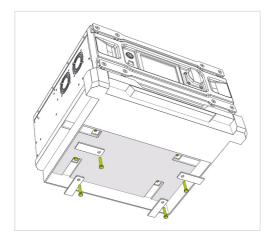

6. Mount the 4 bolts at the marked positions.



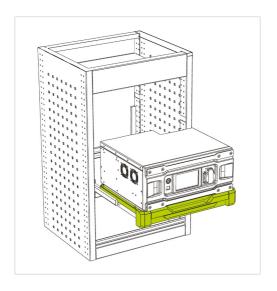

- 7. Place the drawer into the rails connecting the assembly to the cabinet.
- 8. See User & Installation Manual page 25 for further instructions.
- 9. Connect the cables to the Zeliox Compact.



- 10. Gently close the drawer until it clicks in place.
- 11. The Zeliox Compact is ready for use.


### 6. Different brands

## Follow these steps for correct installation




#### WARNING:

- Do not place the Zeliox Compact upside down or on its back.
- All cables should be prepared and routed according the local regulations.

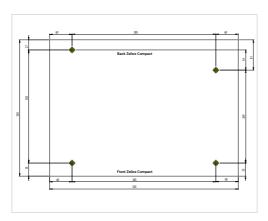

- 2. Use the measurements for placing the Zeliox Compact. The 4 mounting holes should be located according to drawing, 7mm round. The minimum required space around the Zeliox is shown as solid line.
- 3. Make sure the air intake and outlet are free. Use M6 bolts.
- Place 4 spacers (5mm) in between the surface and the underside of Zeliox Compact.
- Make sure the cable section and the Earth Leakage Switch at the back of the Compact are serviceable, and the cables do not kink.
- See User & Installation
   Manual page 25 for further instructions.
- 7. Connect the cables to the Zeliox Compact.
- 8. Zeliox Compact is ready for use.

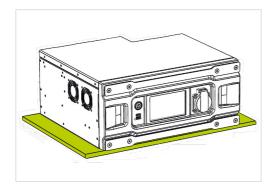



Notes

Notes	



